

WINEGARD®

Coax Connector Installation

QUICK REFERENCE SHEET

TOOLS NEEDED:



SP-6311, RG-6
Connector
and Stripper

OR



SP-6311, RG-6
Connector and
CS-2000

STEP 4.



Fold back braid.

STEP 5.



Place connector on coax.

STEP 6.




Crimp

STEP 7.



Inspect

STEP 8.

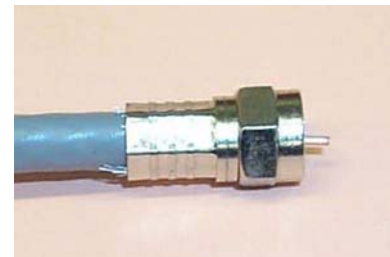

Tug on connector
to test.

INSTALLATION

STEP 1.



Square cut

STEP 2.



Insert coax into stripper.

STEP 3.



Strip coax.